


INSTALLATION GUIDE

Thermo Bathroom Heater

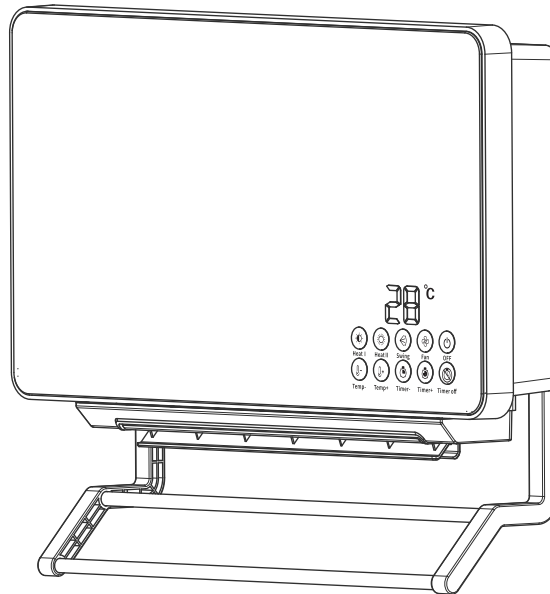

Product Code:

MBHT2200W Thermo Bathroom Heater Wall Heater PTC 2200W

CAUTION
READ INSTRUCTIONS
CAREFULLY FOR SAFE
INSTALLATION AND FAN
OPERATION



**MUST BE
INSTALLED BY
A LICENSED
ELECTRICIAN**

SAFETY PRECAUTIONS

Dear customers,

Thank you for selecting Martec Bathroom Heater 2 in 1. Please read all instructions before commencing installation.

IMPORTANT: This unit must be installed to comply with the appropriate council regulation and the Australia and New Zealand wiring rules AS/NZS3000:2000 or latest edition thereof.

WARNING - INSTALLATION ONLY TO BE CONDUCTED BY QUALIFIED ELECTRICIANS


1. Use this heater only as described in this manual. The manufacturer does not recommend any other use as this may cause fire, electric shock, or injury to persons. If you have questions, contact the manufacture or local agent.
2. All wiring must be carried out by a Licensed Electrician n accordance with all applicable codes and standards
3. Make sure the power is off before the installation.
4. When installing the drilling holes, be sure not to damage the wires or any other concealed facilities.
5. Do not install this machine directly under the power socket or below the curtains to avoid causing a fire.
6. Do not use this machine near heat sources, beds, bathtubs, wardrobes, etc., or in places with water sources and flammable materials. Do not block the intake outlet.
7. During installation, a "full-pole power switch" with a contact opening distance of no less than 3mm must be installed in the power supply line to connect or disconnect the power supply. Its rated load capacity should be no less than 250V to 16A, and it should be installed on the outside of the bathroom, in an easily accessible location.
8. Please use an AC power supply of 220-240V to 50Hz and use a 16A or larger socket that complies with national standards to ensure safety.
9. The heater is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.
10. During installation and use, keep the machine away from bathtubs and swimming pools.
11. The appliance shall, under no circumstances, be covered with insulating material or similar material.
12. Joists, beams and rafters shall not be cut or notched to install the appliance.

INSTALLATION

IMPORTANT CONSIDERATIONS BEFORE INSTALLING

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure they do not play with the machine.
3. During use, do not touch the hot air outlet of the machine to avoid burns.
4. Do not insert your fingers or other objects into the outlet and the intake.
5. When the power is off or the machine is not used for a long time, turn it off and pull out the power plug from the socket.
6. To avoid overheating, do not cover this machine with any object or block the hot air outlet.
7. Do not place any objects on the top of this machine to avoid danger.
8. Do not insert any foreign objects into the machine to avoid electric shock or fire.
9. Do not rinse this machine with water.
10. Do not touch the power switch or the power plug and other high-voltage power positions with wet hands.
11. If the power cord is damaged, to avoid danger, it must be replaced by professionals from the manufacturer's electrical maintenance department or similar departments.
12. This machine is not intended for people with physical weakness, slow reactions, or mental disorders. It can only be used safely under the guidance or assistance of personnel responsible for safety.
13. During use, if there is an unpleasant smell, smoke, etc., turn off the machine, pull out the power plug, and send it to the maintenance department for inspection and repair.
14. The internal heating elements of this machine are equipped with resettable thermal protectors and thermal fuses. If the machine stops heating due to overheating during use, it is a normal phenomenon. It can continue to heat after a slight cooling. If the fan does not rotate or the machine does not heat, unplug the power and send it to a professional maintenance department for inspection and repair. Do not disassemble it yourself.
15. There is high temperature and high voltage inside the machine. Non-professionals are strictly prohibited from disassembling it privately.
16. After use, pay attention to daily maintenance and wipe the machine panel clean.

Wiring Diagram



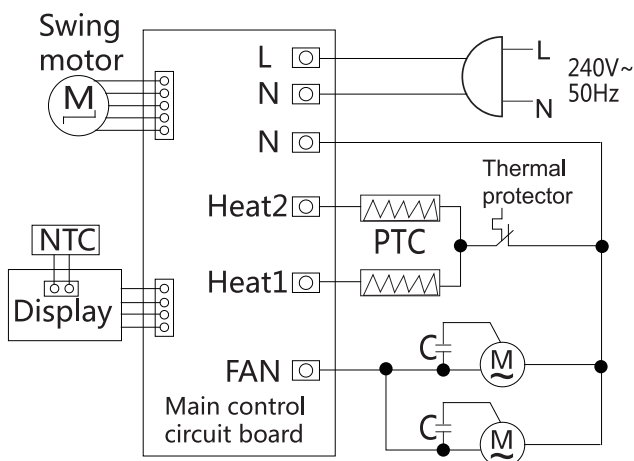


PLEASE NOTE: Check for any damage to the unit prior to installation.
Physical damage such as marks and scratches are not covered by the in-home warranty.
In this case, please contact the Martec support team to discuss replacement parts.

INSTALLATION

1. Determine the installation location and drill the holes

Ensure that the installation position is at least 1.8 meters above the ground. According to the "Installation Drilling Template" provided in the package, draw four horizontal holes on the wall, and adjust the distance between the center holes according to the actual instructions of the "Installation Drilling Template". Use a $\varnothing 8$ drill bit to drill 4 holes at the positions of the 4 drawing holes. The diameter of the holes should be just large enough to fit the plastic expansion tube.

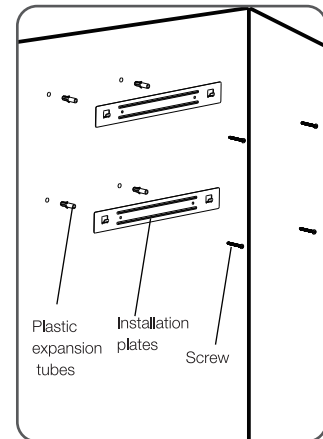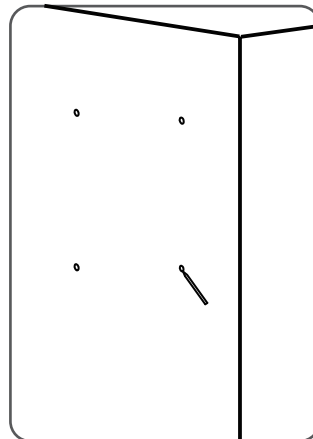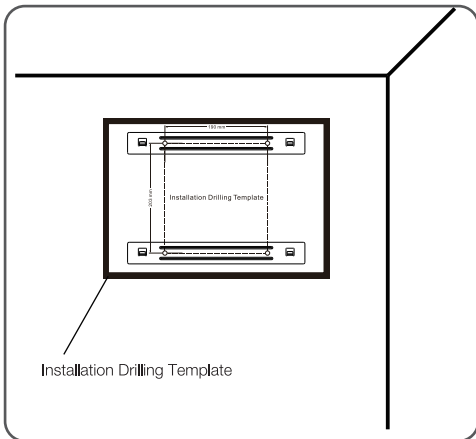


2. Fixed installation mounting plate

Insert the plastic expansion tubes into the 4 holes respectively. Fix the two installation plates in the accessory with screws on the wall. Pay attention to ensuring that the direction of the hooks on the Installation Drilling Template is consistent with the direction on the positioning plates.

3. Install the towel holder


Take out the hanging rod and plastic bracket from the packaging accessory box. Insert the metal hanging rod into the plastic bracket as shown in the diagram, and fix the plastic bracket to the back of the main unit with screws.

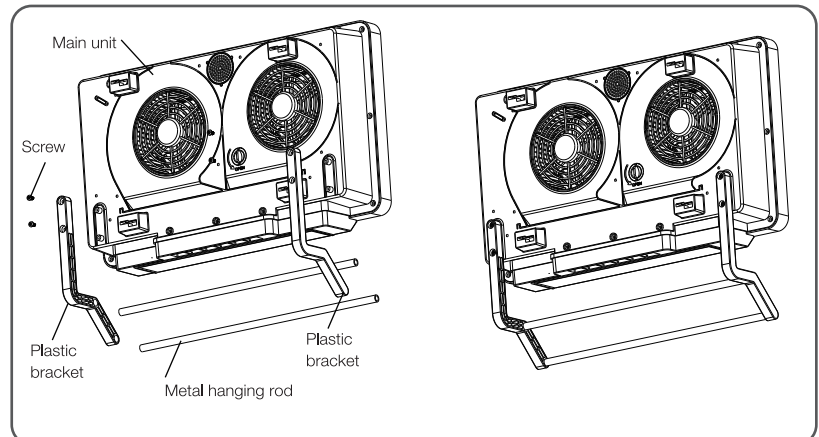

4. Install the main unit


Align the installation holes on the product base with the 4 hooks on the installation bracket on the wall. Insert the product smoothly and then gently move it to the left until both hooks of the installation bracket are inserted into the installation slots on the product base. Confirm that it is securely fixed and then release the product. Next, insert the power plug into the socket, press the function key one by one, and confirm that the functions are normal.

(Note: The power cord is 1.5 meters long. The installation distance of the heater from the power socket should be within 1 meter.)

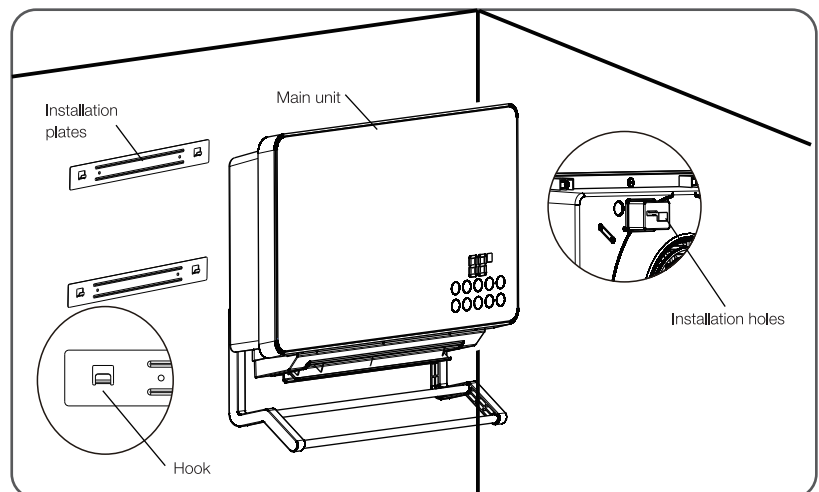

INSTRUCTIONS FOR USE

35 °C

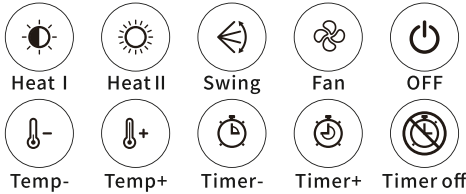

1. Heat I

Touch the button to turn on or off the low heating function.

2. Heat II

Touch the button to turn on or off the high heating function.

3. Swing

When the heating and fan functions are turned on, touch the "Swing" button. The Swing blades of the main unit will change from a fixed Angle to swinging back and forth. Touch the "Swing" button again, and the swing blades will stop at the current Angle

4. Fan

Touch the button to turn on or off the fan function.

5. Temp-

Touch the "Temp-" button to activate the constant temperature heating function. The default set temperature is 22 °C. Each time you press the "Temp-", the temperature decreases by 1 °C. The temperature setting range is from 20 °C to 45 °C. During the temperature setting process, the screen displays the set value, which flashes for 3 seconds. Then, the host makes a "beep" sound to indicate that the setting is completed, and the screen returns to display the current ambient temperature. Long press the Temp-" button for 3 seconds to turn off the constant temperature heating.

6. Temp+

Touch the "Temp+" button to activate the constant temperature heating function. The default set temperature is 22 °C. Each time you press "Temp+", the temperature will increase by 1 °C. The temperature setting range is from 20 °C to 45 °C. During the temperature setting process, the screen displays the set value, which flashes for 3 seconds. Then, the host makes a "beep" sound to indicate that the setting is completed, and the screen returns to display the current ambient temperature. Long press the Temp+" button for 3 seconds to turn off the constant temperature heating.

7. Timer-

When the heating and fan functions are turned on, touch the "Timer-" button to activate the timer function. The default set time is 5 minutes. Each time you press the "Timer-" button, the time decreases by 5 minutes. The timer adjustment range is from 5 to 90 minutes. During the adjustment period, the timing duration remains flashing. If no adjustment is made within 3 seconds, the host will make a "beep" sound, then start the timing, and the screen will resume displaying the temperature.

8. Timer+

When the heating and fan functions are turned on, touch the "Timer+" button to activate the timer function. The default set time is 5 minutes. Each time you press the "Timer+" button, the time increases by 5 minutes. The timer adjustment range is from 5 to 90 minutes. During the adjustment period, the timing duration remains flashing. If no adjustment is made within 3 seconds, the host will make a "beep" sound, then start the timing, and the screen will resume displaying the temperature.

9. Timer off

Touch the button to turn off the timer function.

10. OFF

Touch the buttons to turn off all the functions that are currently running.

Note: When the heating function is turned off, the fan will shut down after a 20-second delay.

Note: After the main unit has been running continuously for 1.5 hours, all functions will be automatically turned off, except for the timer function.

MAINTENANCE

1. When the product is not in use, please turn off the switch and cut off the power supply.
2. Before cleaning and maintaining, disconnect the power supply to allow the product to cool down.
3. When cleaning, use a soft cloth dampened with a small amount of water or kitchen cleaning agent to gently wipe the surface of the product.
4. Do not use solvents such as alcohol, gasoline, banana water or toluene for cleaning to avoid the shell turning yellow or getting corroded.
5. After cleaning the product, dry it and pack it for storage in the original packaging.

WARRANTY INFORMATION

2 Year In-Home Warranty

For further information please visit our website (link below) OR scan the QR code.

<https://www.martec.com.au/warranty-statement>



For technical support, please contact Martec customer service hotline at **(02) 8778 7500**.

If you suspect any issues with the installation, please contact your installer to resolve the matter. In case you believe the issue is related to a manufacturing defect, you can file a warranty claim by visiting

<https://www.martec.com.au/warranty-claim-form> or scan the below QR code.

IMPORTANT NOTICE: All claims for warranty must be accompanied with the following three documents:

1. Copy of the Installation Receipt OR Tax Invoice OR Certificate of Compliance for the installation of the Martec product from the installing electrician
2. Copy of the Purchase Receipt for the Martec product
3. Submit an online warranty claim form. Please ensure that the purchaser's full name and contact details are clearly stated, in addition to the full nature of the fault and the product code.

It is the responsibility of the purchaser to keep the documents required for a warranty application of the warranty period.

Customer Service operates between 8AM to 4PM EST Monday to Friday.

Customer Service Number: (02) 8778 7500

