


# INSTALLATION GUIDE

## Thermo Bathroom Heater

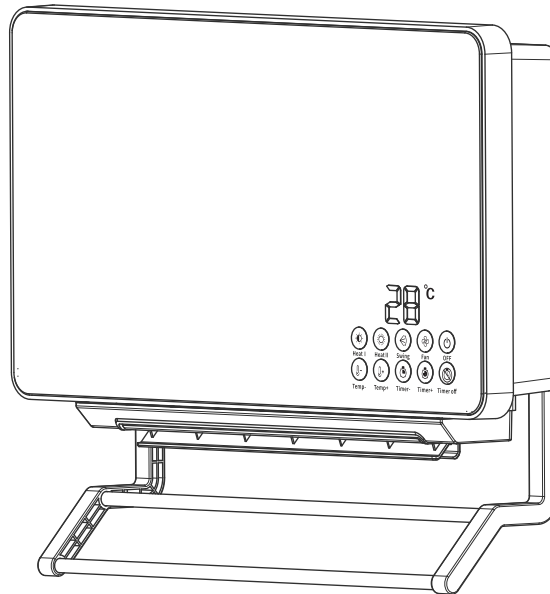

**Product Code:**

MBHT2200W

Thermo Bathroom Heater Wall Heater PTC 2200W

**CAUTION**  
READ INSTRUCTIONS  
CAREFULLY FOR SAFE  
INSTALLATION AND HEATER  
OPERATION

# SAFETY PRECAUTIONS

Dear customers,

Thank you for selecting Martec Bathroom Heater 2 in 1. Please read all instructions before commencing installation.

IMPORTANT: This unit must be installed to comply with the appropriate council regulation and the Australia and New Zealand wiring rules AS/NZS3000:2000 or latest edition thereof.

## WARNING

1. Use this heater only as described in this manual. Any other use is not recommended and may cause fire, electric shock or personal injury.
2. Before drilling the mounting holes, check for concealed electrical wiring, water pipes or other services.
3. Do not install this machine directly under the power socket or below the curtains to avoid causing a fire.
4. Do not install or use the appliance where it may be exposed to direct contact with water. Keep it away from heat sources and flammable materials. Do not block the air inlet or outlet.
5. The power plug and socket must remain easily accessible after installation so that the appliance can be disconnected from the power supply when required.
6. Connect the appliance only to a 220–240V AC, 50Hz power supply and a suitably rated socket that complies with applicable local standards.
7. The heater is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.
8. Install and use the appliance in a location where it will not be exposed to splashing or direct contact with water.
9. Do not cover the appliance with clothing, towels, insulating material or any other objects.
10. Ensure the wall and mounting fixings are suitable for supporting the weight of the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure they do not play with the machine.
3. During use, do not touch the hot air outlet of the machine to avoid burns.
4. Do not insert your fingers or other objects into the outlet and the intake.
5. When the power is off or the machine is not used for a long time, pull out the power plug from the socket.
6. To avoid overheating, do not cover this machine with any object or block the hot air outlet.
7. Do not place any objects on the top of this machine to avoid danger.
8. Do not insert any foreign objects into the machine to avoid electric shock or fire.
9. Do not rinse this machine with water.
10. Do not touch the power switch or the power plug and other high-voltage power positions with wet hands.
11. If the power cord is damaged, discontinue use immediately and do not operate the appliance until the power cord has been replaced.
12. If the appliance emits an unusual smell, smoke or other abnormal signs during use, switch it off immediately, unplug it and discontinue use.
13. The appliance is fitted with thermal protection devices. If it stops heating due to overheating, switch it off, unplug it and allow it to cool before using it again. If the fan does not operate or the appliance does not resume heating after cooling, discontinue use. Do not disassemble or repair the appliance yourself.
14. The appliance contains high-temperature and live electrical components. Do not disassemble or attempt to repair the appliance yourself.

**PLEASE NOTE:** Check for any damage to the unit prior to installation.




Physical damage such as marks and scratches are not covered by the replacement warranty.

In this case, please contact the Martec support team to discuss replacement parts.

# INSTALLATION

## 1. Determine the installation location and drill the holes

Ensure that the heater is installed at least 1.8 m above the floor. Position the supplied Installation Drilling Template on the wall and mark the four mounting-hole locations. Use a Ø8 drill bit to drill 4 holes at the positions of the 4 drawing holes. Insert the supplied plastic wall plugs into the drilled holes.

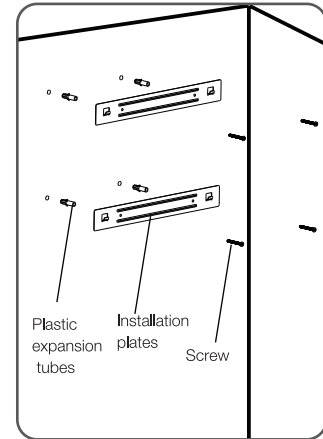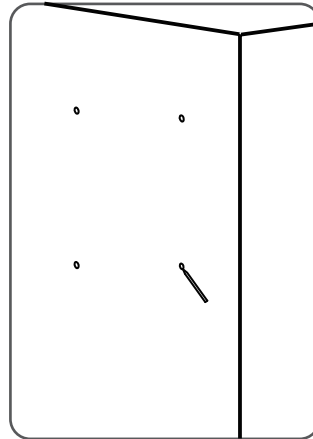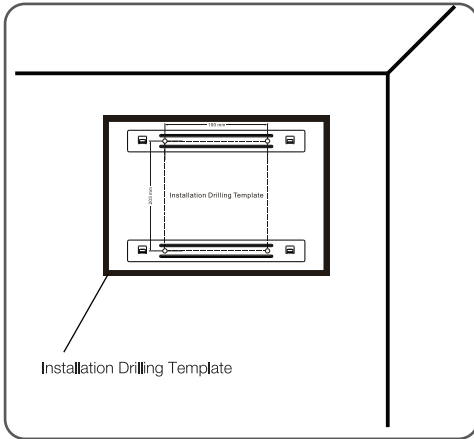


## 2. Install the mounting plates

Secure the two supplied mounting plates to the wall using the screws. Ensure that the hooks on both mounting plates are facing in the direction shown on the Installation Drilling Template.

## 3. Install the towel holder (Optional)


Remove the metal hanging rod and the two plastic brackets from the accessory box. Insert both ends of the metal hanging rod into the plastic brackets as shown, then secure the brackets to the back of the main unit using the screws.

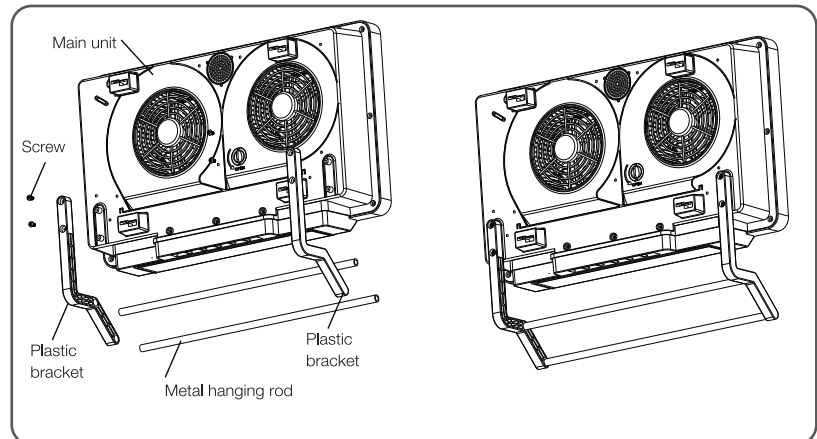

## 4. Install the main unit


Align the mounting slots on the back of the main unit with the four hooks on the wall-mounted plates. Carefully place the main unit onto the hooks, then slide it gently to the left until all four hooks are fully engaged in the mounting slots. Check that the main unit is securely fixed before releasing it. Plug the power cord into a suitable power outlet and test each function to ensure that the heater operates correctly.

**(Note: The power cord is 1.5 meters long. The installation distance of the heater from the power socket should be within 1 meter.)**

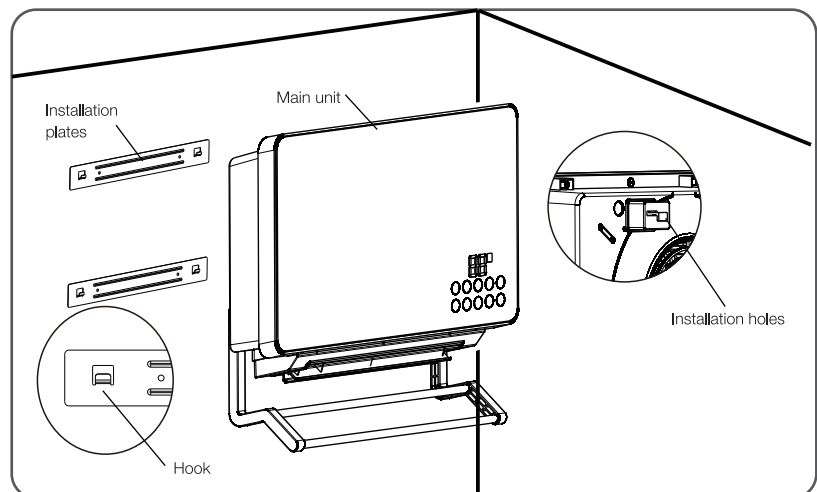

# INSTRUCTIONS FOR USE

## CONTROL PANEL

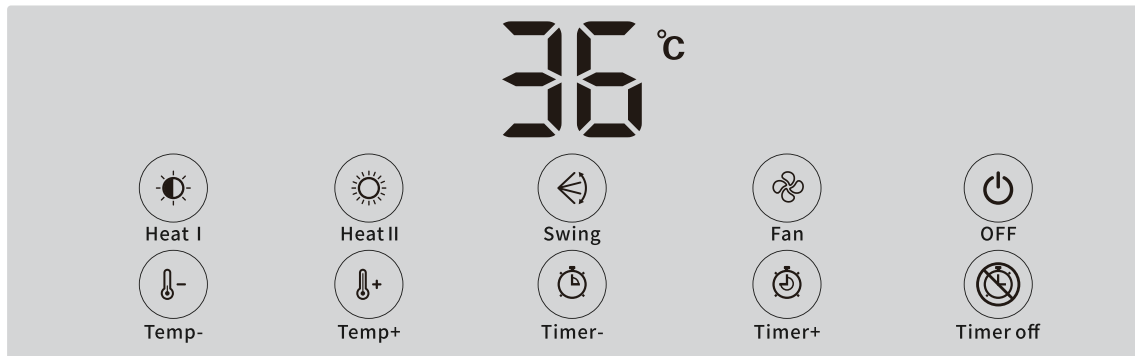

## FUNCTION CONTROLS

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Heat I (Low Heat)</b>   | Press to toggle the Low Heat mode ON or OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Heat II (High Heat)</b> | Press to toggle the High Heat mode ON or OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Swing(Louvres)</b>      | While heating or fan mode is active, press to start automated louvre oscillation. Press again to lock the louvres in your preferred position.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Fan Only Mode</b>       | Press to toggle the cool air fan function ON or OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Temp - (Decrease)</b>   | <p>Activates target temperature control (Default: 22°C). Each press decreases the target temperature by 1°C (Range: 20°C to 45°C). The display flashes for 3 seconds during adjustment, beeps to confirm, then reverts to showing ambient room temperature. Press and hold for 3 seconds to cancel thermostat control.</p> <p><b>Note: In Target Temperature Control mode, Heat II (High Heat) turns on automatically. Once the target temperature is reached, it switches to Low Heat. If temperature drops 2°C below target, High Heat reactivates to maintain warmth. The heater does NOT turn off completely in this mode.</b></p> |
| <b>Temp + (Increase)</b>   | <p>Activates target temperature control (Default: 22°C). Each press increases the target temperature by 1°C (Range: 20°C to 45°C). The display flashes for 3 seconds during adjustment, beeps to confirm, then reverts to showing ambient room temperature. Press and hold for 3 seconds to cancel thermostat control.</p> <p><b>Note: In Target Temperature Control mode, Heat II (High Heat) turns on automatically. Once the target temperature is reached, it switches to Low Heat. If temperature drops 2°C below target, High Heat reactivates to maintain warmth. The heater does NOT turn off completely in this mode.</b></p> |
| <b>Timer - (Decrease)</b>  | While active, press to decrease the run timer in 5-minute increments (Range: 5 to 90 mins). Selected time flashes; after 3 seconds of inactivity, the unit beeps, locks in the timer, and reverts to ambient temperature display.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Timer + (Increase)</b>  | While active, press to increase the run timer in 5-minute increments (Range: 5 to 90 mins). Selected time flashes; after 3 seconds of inactivity, the unit beeps, locks in the timer, and reverts to ambient temperature display.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Timer off</b>           | Press to instantly cancel any active timer setting.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>OFF(Master Stop)</b>    | Press to shut down all running functions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

# IMPORTANT OPERATIONAL NOTES

- Cool-Down Safeguard: When turning off the heating mode, the internal fan will remain running for approximately 20 seconds to safely cool down the heating elements before shutting off completely.
- Auto Shut-Off Protection: As a safety precaution, the main unit is programmed to turn off automatically after 1.5 hours of continuous operation.

## MAINTENANCE

1. When the appliance is not in use, switch it off and unplug it from the power outlet.
2. Before cleaning or maintenance, switch off the appliance, unplug it from the power outlet and allow it to cool down.
3. Clean the appliance with a soft cloth slightly dampened with water or a mild detergent.
4. Do not use solvents such as alcohol, petrol, thinners or other harsh chemicals, as they may damage or discolour the surface.
5. After cleaning, ensure the appliance is completely dry before use.

## WARRANTY INFORMATION

2 Year Replacement Warranty

For further information please visit our website (link below) OR scan the QR code.  
<https://www.martec.com.au/warranty-statement>



For technical support, please contact Martec customer service hotline at **(02) 8778 7500**.

**Customer Service operates between 8AM to 4PM EST Monday to Friday.**