

LIFESTYLE AC Series Installation Guide

Thanks for choosing our Lifestyle AC Series ceiling fan.
We strongly recommend that you read this manual carefully before installation.



Models Parameters (Fan Only):-

DLS104W	1067mm 4 blade ceiling Fan White
DLS134W	1320mm 4 Blade Ceiling Fan White
DLS134B	1320mm 4 Blade Ceiling Fan Brushed Aluminium
DLS134M	1320mm 4 blade ceiling Fan Matt Black

Models Parameters (Fan and LED Light):-

DLS1043W	1067mm 4 blade ceiling Fan White with 24W Tricolour LED Light
DLS1343W	1320mm 4 Blade Ceiling Fan White with 24W Tricolour LED Light
DLS1343B	1320mm 4 Blade Ceiling Fan Brushed Aluminium with 24W Tricolour LED Light
DLS1343M	1320mm 4 blade ceiling Fan Matt Black with 24W Tricolour LED Light

Models Parameters (Fan and E27* Light):-

DLS1044W	1067mm 4 blade ceiling Fan White with E27* Light
DLS1344W	1320mm 4 Blade Ceiling Fan White with E27* Light
DLS1344B	1320mm 4 Blade Ceiling Fan Brushed Aluminium with E27* Light
DLS1344M	1320mm 4 blade ceiling Fan Matt Black with E27* Light

*Supplied with 2x E27 lamp holders (globes not included)

Part List:

Qty 1x motor assembly	Qty 1x instruction manual	Qty 1x screw kit	Qty 1x balancing kit
Qty 1x hanging bracket	Qty 1x wall control kit	Qty 4x blades	





Application

Flat Surface / Ceiling

Slope Ceiling up to 15°


Corrugated Ceiling

Apex Ceiling

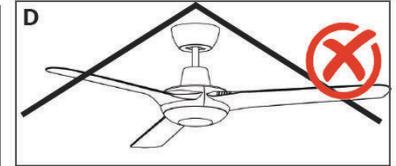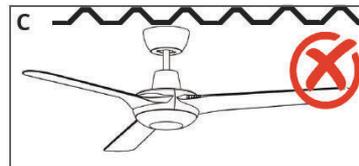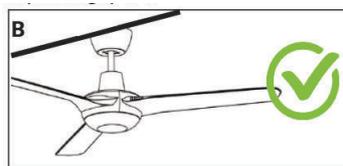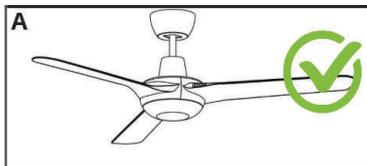


How to Assemble

Fg.1

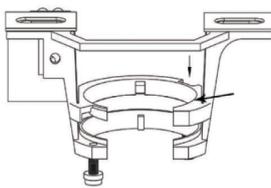


Secure the hanger bracket to ceiling beam or a suitable piece of timber inserted between the ceiling beams using the two long screws supplied with the package. (See Fg.1)

Fg.2

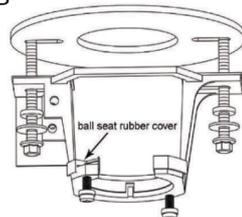


Place circular shockproof gasket above the hanger bracket. Align the bracket and screw the hanger bracket to the ceiling tightly. (See Fg.2)

Fg.3

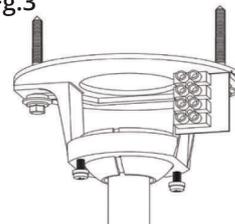

Place fan into hanger bracket and align Ball Joint Slot with hanger bracket as illustrated. (See Fg.3)

Fg.4

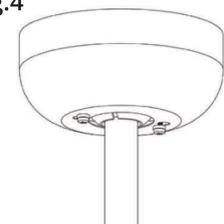


After wiring is completed, attach the canopy to the hanger bracket by pushing upwards and twisting anti-clockwise. Tighten screws and ensure canopy is not touching the ball joint. (See Fg.4)

WARNING Installation MUST carry out by a qualified and licensed electrician.

How to Install Blades

Fig.5

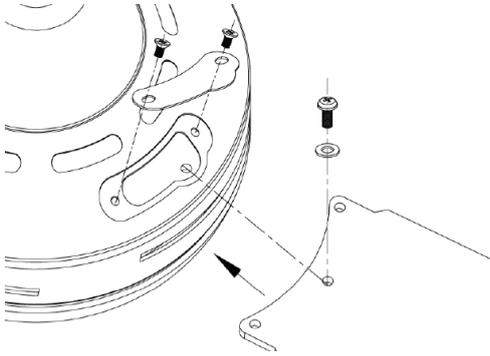


Remove the two screws from the covering plate of blade fixing hole. Insert blades one at a time through four slots around the canopy and secure with three screws for each blade through the top opening . Repeat this procedure for all blades Replace the cover plate and secure with two screws one all four blades have been firmly fitted. (See Fig.5)

NB: Ensure the blades do not get damaged or bent during the installation process while the fan maybe on the ground, this will affect the performance and balance of the fan and this is NOT covered under warranty.

How to Install / Remove the Cover


Fig.6

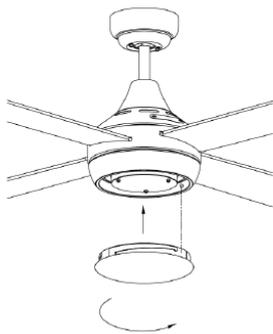

To install align the glass shade as shown (See Fig.6). Place the glass shade and spin it clockwise.

To remove turn the glass shade anti-clockwise.

Fig.7

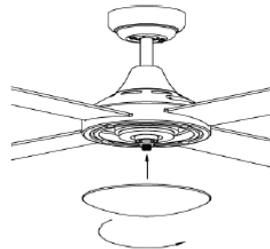


To install align the cover with the central spindle extended from motor (See Fig. 7) and spin it clockwise.

To remove turn the cover anti-clockwise.

CCT (Colour Changeable Temperature)

Fig.8

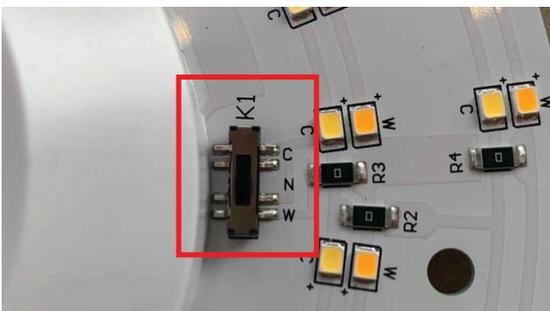

Choose colour temperature by flicking the switch in the LED (See Fig.8)


C = 5000K cool white

N = 4000K neutral white

W = 3000K warm white

WARNING Installation MUST carry out by a qualified and licensed electrician.

Instructions and Functions of Transmitter

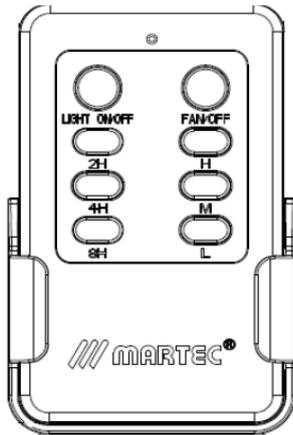

Setting the code on transmitter

1. Remove battery cover
2. Slide code switches to your choice of ON/OFF position
3. Install battery (supplied)


Setting code on receiver:-

1. Slide code switches on the receiver in the same position set on the transmitter

NB: Martec Remotes - MPREMS (as illustrated on the left), MPLCDS and MAPP are sold separately.



Installing Receiver Remote Control

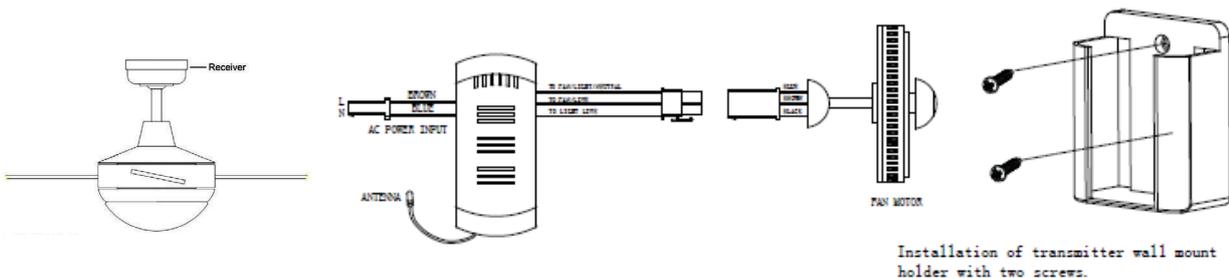

Installation of transmitter wall mount holder with two screws.

Pairing Instructions

- Turn "ON" the power supply and within 30 seconds
- Press and hold the transmitters "FAN ON/OFF" button for 5 seconds and a "beep" will be heard
- Pairing initial step must be performed within 30 seconds of power being turned on
 - i) ensure the isolation switch or power supply to the first installed fan is turned off prior to pairing further fans ie. pair one fan at a time
 - ii) ensure isolation switch is kept to the ON position, the isolation switch is not to be used as a light switch as this will damage and make the remote receiver inoperable


Important Reminders

- Receiver must be correctly installed in the mounting bracket
- When the transmitter cannot control the receiver, please check
 - i) has sufficient battery in the transmitter
 - ii) any existence of similar remote controlled products nearby that cause interference
- Replace battery if getting low as this will affect sensitivity of the transmitter
- Take the battery out from the transmitter when leaving used for a long time to avoid battery leaks
- Support up to 200W lighting power
- Isolation switch MUST be connected in the line
- Dimming switch on the light models is operated by tuning the light ON/OFF button within 1s. Light output will dim in stages from 24W to 9W to 3W approximately


WARNING Installation MUST carry out by a qualified and licensed electrician.

Wire Connections


NB: Wall control with light

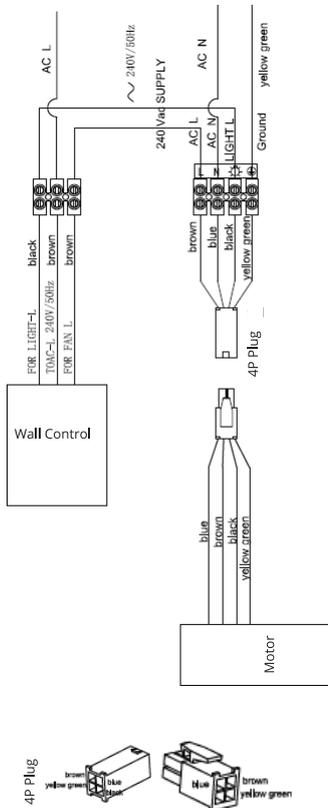

NB: Wall control without light

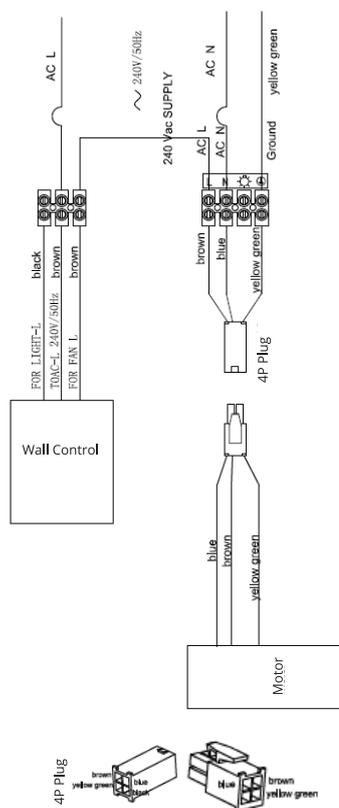

NB: Remote Control with or without light

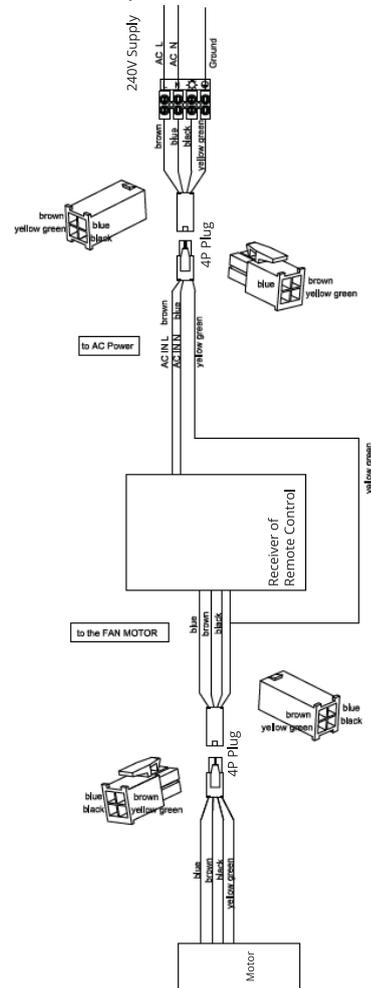

6*Year Warranty
(3 Year In-Home + additional 3 Year Replacement on the motor only)

For further information please visit our website (link below) OR scan the QR code.
<https://www.martecaustralia.com.au/warranty-statement/>



WARNING

- Installation of fans **MUST** follow SAA standards and meet local authority regulations.
- Installation **MUST** be carried out by a qualified and licensed electrician.
- Fan and light **MUST** be earthed.
- Bracket **MUST** be firmly attached to a flat solid structure or timber frame.
- **DO NOT** mix blades from one model to another, all blades **MUST** be replaced if damaged.
- The warranty is **VOID** if product is not installed according to this installation guide.

